


STEP 1

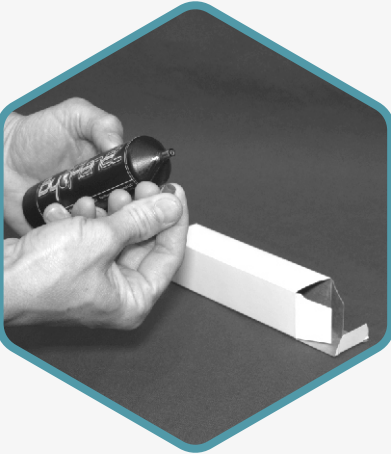

REMOVE THE BATTERY FROM THE BOX AND REMOVE THE PROTECTIVE RED RUBBER COVER.

STEP 2



ROTATE THE BATTERY CAP AT THE REAR END OF THE SPRAYER, OPPOSITE THE NOZZLE, COUNTER-CLOCKWISE, TO LOOSEN THE BATTERY CAP AND REMOVE THE BATTERY.

STEP 3



INSERT THE BOTTOM OF THE BATTERY INTO THE BATTERY CAP TO ALIGN THE BATTERY FOR INSERTION.

STEP 4



INSERT THE BATTERY INTO THE SPRAYER, WHILE ATTACHED TO THE BATTERY CAP AND ROTATE CLOCKWISE TO TIGHTEN.

IMPORTANT:
*BEFORE PERFORMING ANY REPAIRS TO THE UNIT
BE SURE THAT THE POWER SOURCE IS DISCONNECTED!*

info@serviceteam.com
877-220-0550

